WAHOO MONITOR HD

SONY CLM-V55
USER GUIDE

INSTALLING THE WAHOO BULKHEAD

1) SELECT A BULKHEAD POSITION ON THE SAME SIDE AS THE VIDEO CONNECTOR ON YOUR CAMERA

2) REMOVE THE NUT AND WASHER FROM THE WAHOO BULKHEAD AND CLEAN THE O-RING

3) CLEAN THE HOUSING HOLE AND INSTALL THE WAHOO BULKHEAD

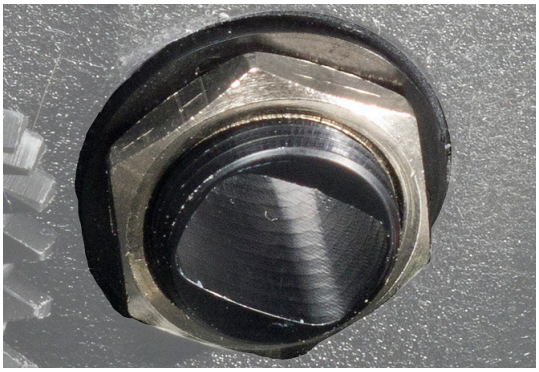

4) ON THE INSIDE OF THE HOUSING, INSTALL THE WASHER AND FINGER TIGHTEN THE NUT

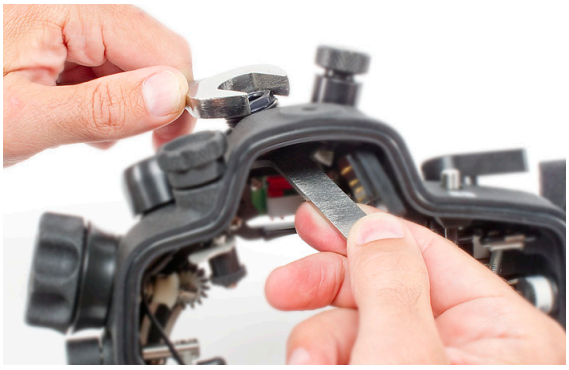

5) USE A STANDARD WRENCH TO HOLD THE BULKHEAD IN PLACE WHILE USING THE PROVIDED LOW PROFILE WRENCH TO SECURELY TIGHTEN THE NUT

6) CLEAN THE CAP O-RING AND INSTALL THE CAP WHEN DIVING WITHOUT THE WAHOO INSTALLED

!! CAUTION !!

IF YOU ARE SELF-INSTALLING THE WAHOO BULKHEAD, TEST THE WATERTIGHTNESS OF YOUR WORK BY DIVING THE HOUSING WITHOUT THE CAMERA INSTALLED.

INSTALLING THE WAHOO HOUSING

1) NOTICE THE RECTANGULAR HOLE INSIDE THE WAHOO BULKHEAD

2) ALIGN THE CABLE WITH THE RECTANGULAR HOLE AND SLIP THE CABLE INTO THE BULKHEAD

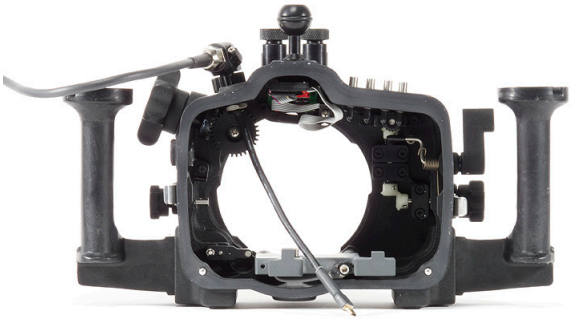

3) INSPECT THE CABLE O-RING, PRESS THE CABLE IN PLACE, AND TIGHTEN THE LOCKING COLLAR

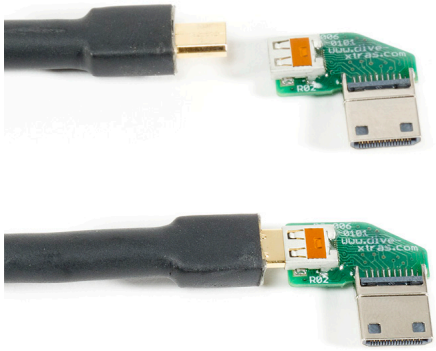

4) PLUG THE RIGHT ANGLE ADAPTER INTO THE WAHOO VIDEO CABLE

5) MOUNT THE WAHOO ON TOP OF YOUR CAMERA HOUSING WITH YOUR CHOICE OF MOUNTS

6) INSTALL THE MONITOR SHADE FOR USE IN BRIGHT CONDITIONS

INSTALLING THE SONY CLM-V55 MONITOR

1) FOR EASY ACCESS, OPEN LATCHES ON OPPOSITE SIDES AT THE SAME TIME

2) PERMANENTLY REMOVE (PULL OFF) THE RUBBER CONNECTOR GUARD FROM THE MONITOR

3) PLUG-IN THE HDMI CABLE AND FIRST DROP IN THE CONTROL SIDE OF THE MONITOR

4) THEN PRESS THE MONITOR INTO PLACE

5) AT THE START OF EACH TRAVEL EVENT, REMOVE THE MAIN BODY O-RING AND CLEAN THE O-RING CHANNEL WITH A LINT-FREE CLOTH

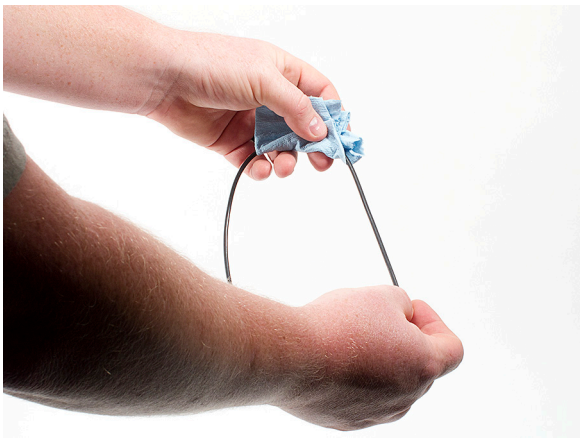

6) USE A LINT-FREE CLOTH TO GENTLY CLEAN THE O-RING, LIGHTLY GREASE, AND RE-INSTALL THE O-RING IN THE WAHOO HOUSING

INSTALLING THE SONY CLM-V55 MONITOR

7) LATCH DOWN THE REAR PLATE OF THE WAHOO HOUSING

8) PLUG THE VIDEO CABLE WITH RIGHT ANGLE ADAPTER INTO THE CAMERA

ADJUSTING THE MENU DIAL

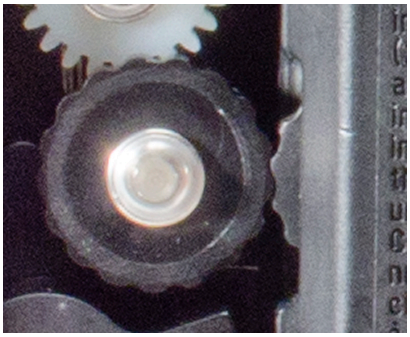

THE MENU WHEEL CONTROL SHOULD NOT SKIP OR GRIND AGAINST THE MONITOR WHEEL

USE THE SUPPLIED 2MM HEX KEY TO ADJUST THE TENSION ON THIS CONTROL IF NECESSARY

WAHOO MONITOR HD

DISTRIBUTED BY:

BACKSCATTER • 1-831-645-1082 • sales@backscatter.com • www.backscatter.com